




MurCal Inc.
41343 12th Street West
Palmdale, CA 93551
(661) 272-4700
sales@murcal.com
www.murcal.com



Installing Non-Grounded Plastic Contactor with Spades

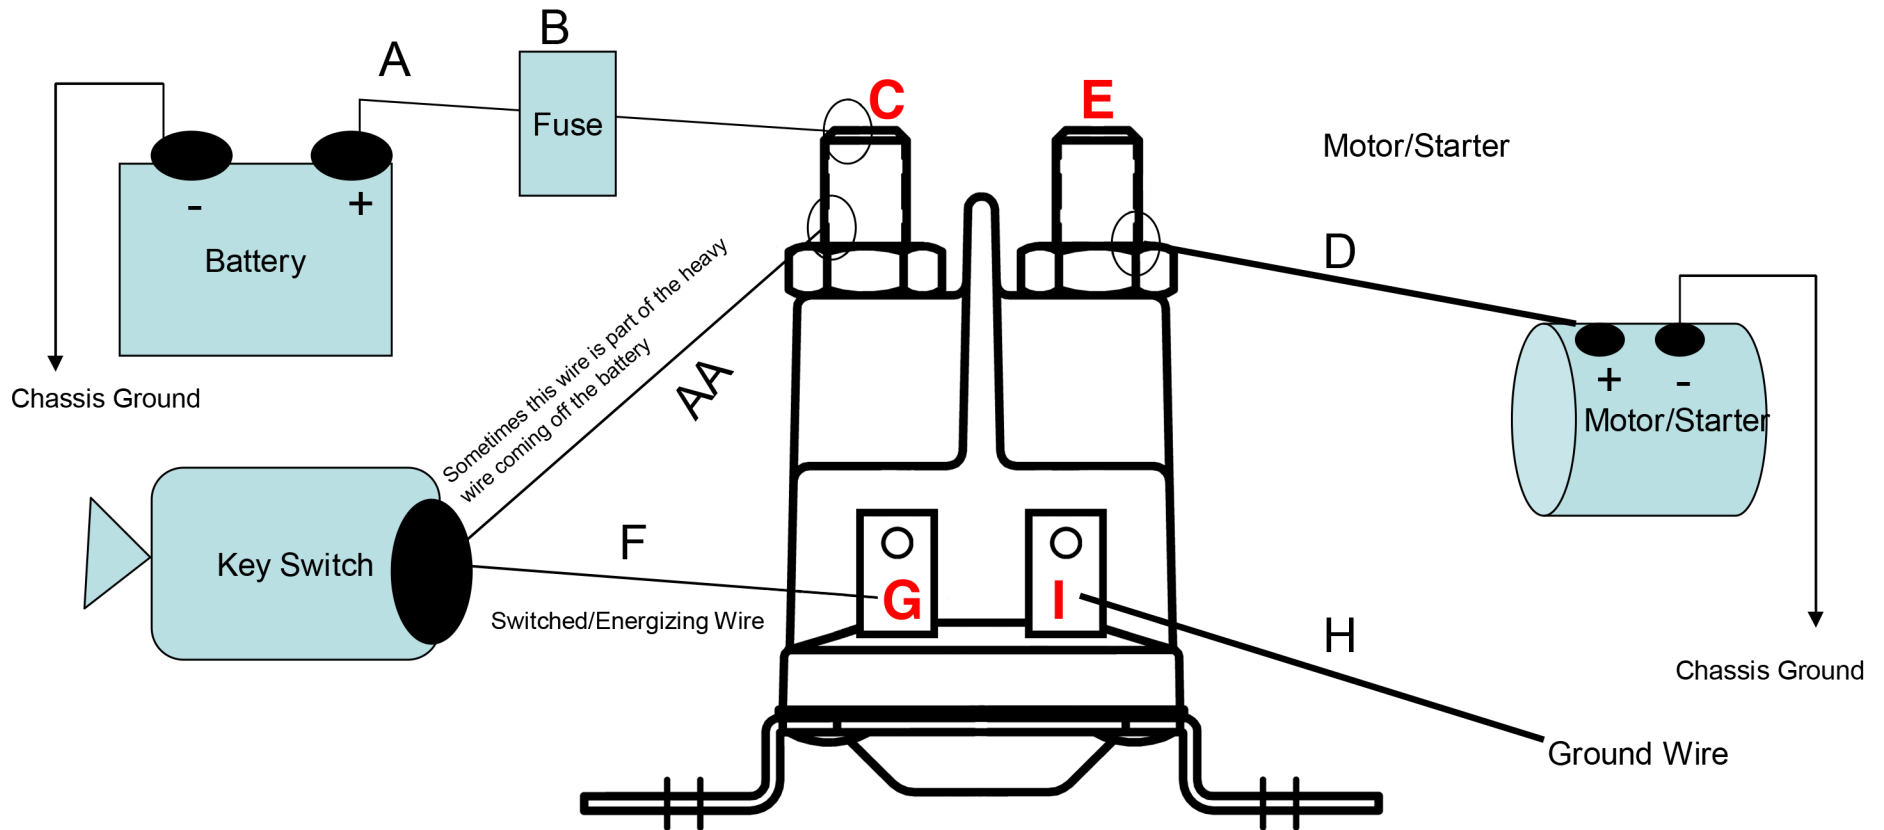

**Note: Do not remove nut from stud (C) or stud (E).
Do not bend spade (G) or spade (I)**

1. Connect battery positive (A) to fuse (B).
2. Connect fuse (B) to high current stud (C) (there may be multiple wires with the battery cable. Connect all of the to the same high current stud).
3. Connect Key Switch Wire (AA) to high current stud (C).
4. Connect wire (D) from the motor/starter to high current stud (E).
5. Connect wire (F) coming off the key switch to spade (G).
6. Connect the ground wire (H) to spade (I).